

Z505 1
Ci60/Ci90 Horizontal
bracket
Mounting instructions

Z5051 Ci60/Ci90 Horizontal bracket

References in the manual

WARNING! This refers to a potentially dangerous situation which may lead to personal injury.

CAUTION! This refers to a potentially dangerous situation which may lead to equipment damage.

IMPORTANT! This refers to a situation which may cause the equipment to malfunction.

Symbols on the equipment



Please refer to the information in the operating manual.

General Information

Mounting instructions
Z5051 Ci60/Ci90 Horizontal bracket

Version 2.0E, 05/2003, D2943

© d&b audiotechnik AG 2003; all rights reserved.

The information presented in this document is, to the best of our knowledge, correct. We will however not be held responsible for the consequences of any errors or omissions. Technical specifications, weights and dimensions can change and should always be confirmed with d&b audiotechnik AG prior to inclusion in any additional documentation.

d&b audiotechnik AG
Eugen-Adolff-Strasse 134, D-71522 Backnang
Telephone +49-7191-9669-0, Fax +49-7191-95 00 00

General Safety and Installation Advice

WARNING!

General safety advice

d&b loudspeakers should only ever be flown or installed using recommended d&b rigging accessories. The d&b rigging accessories described in the d&b rigging accessories manual and the specific mounting instructions are designed and manufactured to have a high load safety factor for their intended role. In order to ensure the highest safety standards, the information presented here on the assembly and safe use of d&b rigging accessories must be carefully understood and followed.

The installation of d&b loudspeakers using the rigging accessories described in the d&b rigging accessories manual and the specific mounting instructions should only ever be carried out by properly qualified personnel in full compliance with all required safety codes and safety standards in force at the place of installation. (In Germany, this means compliance with the recommendations of BGV C1 GUV 6.15)

d&b rigging accessories (components and assemblies) are supplied exclusively for use with specific d&b loudspeakers and are not designed or intended for use with any other loudspeakers or any other devices. The use of d&b rigging accessories to deploy loudspeakers and devices other than those indicated in the d&b rigging accessories manual and the specific mounting instructions is improper use. Improper use can compromise safety by overloading and damaging the rigging accessories. d&b will not be held responsible for any damage or injury resulting directly or indirectly from the improper use of d&b rigging accessories.

d&b rigging accessories must not be modified in any way nor should they be assembled in ways other than those indicated in the d&b rigging accessories manual and the specific mounting instructions. Rigging components supplied as part of a complete assembly are non-interchangeable and must not be exchanged with the component parts of any other assembly.

The component parts of a d&b rigging accessory must only be assembled using the fasteners and methods of assembly recommended in the d&b rigging accessories manual and the specific mounting instructions. The use of fasteners and methods of assembly not specified or approved by d&b may result in an unsafe rigging assembly. Welding, or any other means of permanently fixing rigging components to each other or to cabinet fixing points is not allowed.

General installation advice

WARNING!

Only the screws, fasteners, plain and shakeproof washers specified on the relevant page(s) of the d&b rigging accessories manual and the specific mounting instructions shall be used to fasten together, where appropriate, suitable d&b rigging components.

d&b rigging components or assemblies must only be fixed to d&b loudspeaker cabinets using the cabinet fixing points, assembly methods and fasteners specified on the relevant page(s) of the d&b rigging accessories manual and the specific mounting instructions.

Any wall, floor or ceiling to which a d&b loudspeaker is fixed or

attached using a d&b rigging accessory must be capable of safely and securely supporting the actual load. The rigging accessory used must be safely and securely fixed both to the loudspeaker and to the wall, floor or ceiling.

Other points to consider are: When mounting rigging components on walls, floors or ceilings ensure that all fixings and fasteners used are of an appropriate size and load rating (DIN 18800 standards apply within Germany). Wall and ceiling claddings and the construction and composition of walls and ceilings all need to be taken into account when determining whether a particular fixing arrangement can be safely employed for a particular load. Cavity plugs or other specialist fixings, if required, must be of an appropriate type, fitted and used in accordance with the maker's instructions.

Use only the rigging accessory fixing holes indicated on the relevant page(s) of the d&b rigging accessories manual and the specific mounting instructions to fix d&b rigging accessories to walls, floors or ceilings. Where specified, the recommended maximum torque settings for screw fasteners must be strictly complied with.

Secondary safeties

All loudspeakers flown in theatres, studios or other places of work and entertainment must, in addition to the principle load bearing means of suspension, be provided with an independent, properly rated and securely attached secondary safety.

Only steel wire ropes or steel chains of an approved construction and load rating may be used as secondary safeties. Plastic covered steel wire ropes are not permitted for use as secondary safeties. As recommended by BGV C1 (GUV 6.15), the secondary safety must prevent the load from dropping more than 20 cm if the principal means of suspension fails.

Safety inspections

All rigging components and assemblies are subject to wear and tear, aging, corrosion etc. As safety critical components, it's imperative that, prior to each and every use or installation, all rigging components, rigging assemblies and cabinet fixing points are carefully inspected to ensure that they are free of defects and that they function flawlessly. Care should be taken to identify signs of undue wear and tear, dents, cuts, tears, splits and any indications of corrosion. If upon inspection, damage is discovered and there exists even the slightest doubt as to the physical integrity and safety of the damaged item, then the damaged item must not, under any circumstances, be deployed.

Regular, more rigorous test and inspection of rigging components must also be carried out. Safety legislation and test and inspection requirements will vary from country to country. In most cases, annual independent test and inspection by a suitably approved and qualified inspector will be required - users must ensure compliance with all applicable safety requirements.

d&b recommends regular safety inspections and further recommends that a logbook be kept detailing the test and inspection history of each d&b rigging accessory.

WARNING!

WARNING!

WARNING!

Load safety factors

Rigging accessories are safety critical components which can, by their failure, lead to injury or death. To maximise safety and to reduce the risk of the possible consequences of failure, there exist various recommendations which attempt to govern the safe design and construction of rigging components. Unfortunately, such recommendations vary from country to country and are frequently adaptations of building or construction safety codes which were never intended to specifically cover loudspeaker rigging.

A further complicating factor, frequently a result of insurance requirements, is that different load safety factors may be demanded for different applications. For example, the load safety factor of a rigging component suitable for a fixed, static application may be regarded as insufficient for a mobile application.

What exactly is a load safety factor?

It is accepted general engineering practice to design and build components to have a minimum 1.25X load safety factor. That means a component or assembly that can resist without breaking, a load 25% greater than its specified safe working load (SWL).

Load safety factors are tailored to the estimated level of risk presented by a particular application - the higher the estimated level of risk, then the higher the load safety factor demanded. Because of the high level of risk associated with the possible failure of rigging, load safety factors much greater than 1.25X are demanded. The EU Machinery Directive for example, specifies a 4X load safety factor for shackles. This means that a shackle specified for a SWL of 500 kg should be able to resist a 2000 kg load without breaking.

Even more stringent load safety factors than those specified under EU legislation can apply to applications where rigging is used. One of the most demanding safety codes, the one used to derive the high load safety factors for d&b rigging accessories, is the German BGV C1 safety code.

Section §9 of „Unfallverhütungsvorschrift Veranstaltungs- und Produktionsstätten für szenische Darstellung“ (BGV C1 GUV 6.15) draws a distinction between components used to rig a fixed, static load and components used to rig a moving load. Different load safety factors are required for otherwise similar components depending upon whether they are used with a fixed or with a moving load. A higher load safety factor being required for rigging subject to the higher stress of dynamic loading.

The recommendations are met if it can be shown that:

- The SWL of components such as ropes and slings used as rigging for a fixed load does not exceed 1/10 of their calculated ultimate stress

and

- The SWL of components such as ropes and slings used as rigging for a moving load does not exceed 1/12 of their calculated ultimate stress ...”

A 12X load safety factor is therefore recommended for the following components:

- Chains
- Steel wire ropes (for lifting and securing)
- Shackles
- Eyebolts etc.

In contrast, the EU Machinery Directive (EN292-2) specifies the following load safety factors for rigging components:

Rigging component	Safety factors
Steel wire ropes	factor 5 (EN292-2, chpt. 4.1.2.5a)
Welded link chains	factor 4 (EN292-2, chpt. 4.1.2.5b)
Fabric slings	factor 7 (EN292-2, chpt. 4.1.2.5c)
Metal components	factor 4 (EN292-2, chpt. 4.1.2.5d)

The regulations enshrined in the EU directive are general regulations - few in number and not always particularly clear or detailed. Loudspeakers and their rigging components are not specifically covered. The electrical and mechanical standards of construction for lanterns are covered by a DIN standard (DIN 15560). However, there is no specific DIN or Euro standard covering standards of construction for loudspeaker rigging components or assemblies.

To make matters clear, at least as far as d&b rigging accessories are concerned, we have adopted the following load safety factors:

12X load safety factor:

Chains, ropes, shackles, eyebolts, straps and hooks.

10X load safety factor:

Accessories and fixings for mobile use.

5X load safety factor:

Accessories generally employed in fixed, permanent installations.

The 12X load safety factor is derived from §9, GUV 6.15

The 10X load safety factor is likewise derived from §9 GUV 6.15. as a basic safety standard for rigging components.

From EN292-2 chpt. 4.1.2.5d a 4X minimum load safety factor can be derived for all metal rigging components used in fixed installations. Our choice of a 5X minimum load safety factor for such components provides an enhanced safety margin.

Attaching rigging to loudspeaker cabinets

d&b rigging accessories are supplied with specific mounting instructions and must only be assembled and used in the manner described in these instructions or as specified on the relevant page(s) of the d&b rigging accessories manual. Failure to fully observe specified load capacities or fitting instructions can overload the rigging accessories or the loudspeaker cabinet fixing points causing them to break.

The d&b rigging accessories described in the d&b rigging accessories manual and specific mounting instructions are directly



attached to d&b loudspeaker cabinets and are secured using either screws or bolts fastened to threaded inserts fitted in the loudspeaker cabinets. For attaching rigging, d&b loudspeaker cabinets are fitted threaded inserts.

WARNING!

Where provided, the supplied screws or bolts should be used to attach rigging. Using screws or bolts other than those supplied or specified can result in an insecure and unsafe fixing. Additionally, using screws or bolts longer than those supplied or specified can physically damage a cabinet by penetrating its interior and causing an air leak.

Load ratings

d&b rigging accessories are designed and constructed to have a load rating appropriate to their intended use. The safe working load (SWL) for each d&b rigging accessory is specified in its respective data sheet and on the relevant page(s) of the d&b rigging accessories manual.

In general, d&b rigging components are designed with a 10X load safety factor. Some components, specifically intended only for use in fixed, permanent installations are designed with a 5X load safety factor. Other components, for use with moving as opposed to static loads and therefore subject to the additional wear of dynamic loading, are designed to have a 12X safety factor.

Safety certificates


In Germany, the health and safety authority together with industrial and professional associations has published a safety code for stages and studios. Sound reinforcement equipment installed in these places has to comply with the provisions of this code, published as BGV C1 (GUV 6.15) „Unfallverhütungsvorschrift Veranstaltungs- und Produktionsstätten für szenische Darstellung“.

The code provisions include:

1. Plastic load bearing components are not permitted.
2. Plastic laminated or coated steel wire ropes are not permitted.
3. Load connector parts must have a load safety factor 10X greater than their stated SWL (Safe Working Load).
4. Load bearing chains must have a load safety factor 0.5X greater than the dynamic value specified by the manufacturer - equivalent to a load safety factor 12X the specified SWL.

Provision #4 needs some explanation. High tensile chains and related components conforming to EN 818, grade 8 are specified with a load safety factor 4X their SWL. To comply with the 12X load safety factor required for load bearing chains under BGV C1 (GUV6.15), the specified SWL for DIN certified chains must be derated by a factor of three.

Z5051 Ci60/Ci90 Horizontal bracket

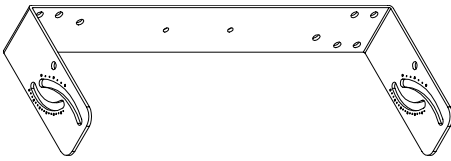

Z5051 Ci60/Ci90 Horizontal bracket

The Z5051 Ci60/Ci90 horizontal bracket enables Ci60 or Ci90 loudspeaker cabinets to be mounted and set to different horizontal or vertical angles.

The horizontal bracket can be used for the following Ci60/Ci90 applications:

- Horizontal or vertical mounting directly to walls, ceilings or other suitable surfaces.
- Flown horizontally using the Z5010 TV spigot with fixing plate, which can be used in conjunction with either the Z5012 Pipe clamp (SWL max. 50 kg/110.2 lb) or the Z5016 Pipe clamp HD (SWL max. 70 kg/154.3 lb). The Z5012 can be used for overhead bars or trusses with a tube diameter between 32 mm and 50 mm and the Z5016 for tube diameters between 42 mm and 64 mm.
- Flown horizontally from steel wire ropes using two Q3091 M8 safety eyebolts.
- Flown vertically using the Z5054 Flying adapter.
- Flown in a vertical array using two Z5051 brackets coupled with the Z5053 bracket connector and the Z5054 CI Flying adapter.
- Flown side by side in a horizontal array using two Z5051 brackets coupled with Z5044 bracket connectors.

Load safety information

The maximum permitted safe working load (SWL) for the Ci60/Ci90 Flying bracket is 27 kg/59.5 lb (a single Ci60 or Ci90 cabinet) and this value must on no account ever be exceeded.

Secondary safeties should always be provided and used when flying or fixing loudspeaker loads overhead.


Part list Z5051

- 1 x Z5051, Ci60/Ci90 Horizontal bracket [1]
- 4 x M10 x 25 Hex head bolt [2]
- 4 x M10 Spring washer [3]
- 4 x 10.5 Plain washer [4]

Weight Z5051

4 kg / 8.8 lb

WARNING!

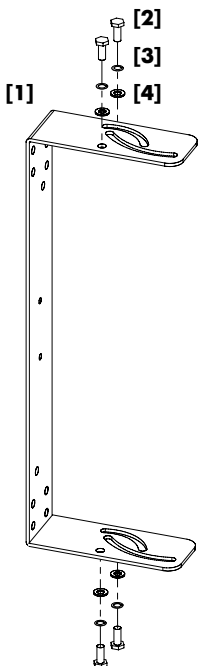

Assembly

Each bracket end is attached to the M10 threaded inserts on the top and bottom of the Ci60/Ci90 cabinet using the M10 x 25 hex head bolts [2], spring [3] and plain [4] washers supplied. (Tool required: Open ended spanner/wrench SW 17 mm)

Fixing bolts with a thread length longer than 25 mm must not be used. Longer bolts can punch in the cabinet threaded inserts and breach the cabinet's airtight seal.

Mounting options

- Mounting holes are provided on the back of the bracket for fixing to a wall, ceiling or other suitable surface. Use two of the holes on each end of the bracket to provide adequate support.
- Centred on the back of the bracket are two M8 threads at the d&b standard spacing of 115 mm, for attaching the Z5010 TV spigot with fixing plate or Q9031 M8 Safety eyebolts. Refer to the specific mounting instructions for assembly and operation of these accessories.
- Five mounting holes are provided at each end on the back of the bracket to attach the Z5044 Bracket connector, the Z5053 CI Bracket connector or the Z5054 CI Flying adapter. Refer to the specific mounting instructions for assembly and operation of these accessories.

Applications and coverage angles.

Each end of the bracket is provided with two semi-circular slots 12 mm wide, (a, b), marked with 5° and 15° detents and one 12 mm hole (c). Slot (a) allows angle settings over a range of 80° and slot (b) over a range of 30° as illustrated below on the right.

The following applications and coverage angles are possible:

 
Wall and ceiling mounting

Using the pair of M10 threaded inserts on the top and bottom of the Ci60/Ci90 cabinet; one bolt is fitted to the 12 mm hole (c) and a second to the semi-circular slot (a) on each end of the bracket. The vertical coverage angle can be set over a range of 80° (+65° to -15°) and defined by the resulting angle of the loudspeaker axis relative to the plane of the mounting surface. The angle can be read from the point on the scale which corresponds to the centre of the fixing bolt in slot a.


a Wall and ceiling mounting – low height and horizontal array configuration

This application allows Ci60/Ci90 cabinets to be mounted to low height ceilings, e.g. under a balcony, or for constructing a horizontal array of two Ci60/Ci90 cabinets using the Z5044 bracket connector.



IMPORTANT!





Provided holes on the back of the Ci60/Ci90 Horizontal bracket

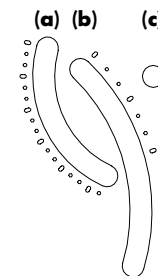


Semi-circular slots with angle scale on each end of the Ci60/Ci90 Horizontal bracket

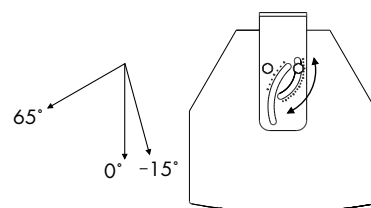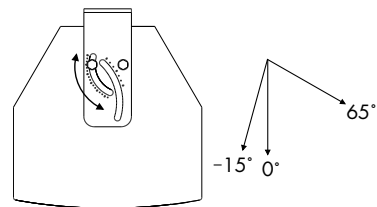


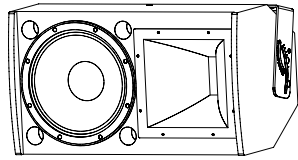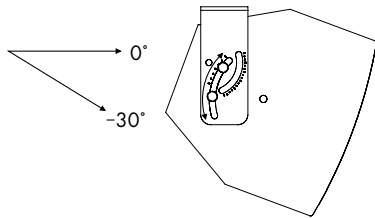

Set up for low height ceilings

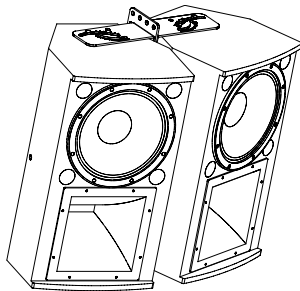

**Horizontal array with
Z5051 Ci60/Ci90 Horizontal bracket and
Z5044 Bracket connector**

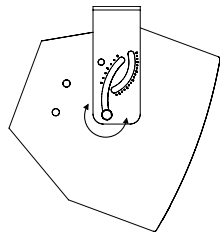

Centre of gravity application

b Using the pair of M10 threaded inserts on the top and bottom of the Ci60/Ci90 cabinet, both bolts are fitted to the semi-circular slot (b) on each end of the bracket. The vertical coverage angle can be set over a range of 30° (0° to -30°) and defined by the resulting angle of the loudspeaker axis relative to the plane of the mounting surface. The angle can be read from the point on the scale that corresponds to the centre of the fixing screw in slot b.

c Centre of gravity application

Ci60/Ci90 cabinets mounted in a Z5051 bracket can be flown horizontally using the Z5010 TV spigot with fixing plate or two Q9031 M8 safety eyebolts suspended with steel wire ropes. It is recommended in these instances to mount the bracket to the single M10 threaded inserts on the top and bottom of the Ci60/Ci90 cabinet ensuring the centre of gravity of a Ci60/Ci90 loudspeaker is in line with the brackets axis of rotation. This prevents the vertical flying angle setting from limiting freedom of movement by creating a twisting force on the mounting support - an essential requirement for stable flying.

Operation

After slackening the mounting bolts [2] the loudspeaker can be adjusted to the required horizontal or vertical angle, tighten the bolts to lock the cabinet in position.

**Dimensions Z5051 Ci60/Ci90 Horizontal bracket
in mm**

