

# DS10 Dante Firmware Update Guide

## 1.1 en

### ! NOTICE!

Only use d&b Firmware files, otherwise there is a risk of permanently damaging the device.

During the update procedure, make sure the power supply of the involved devices is not interrupted and the network is not disrupted.

### Requirements


- PC or Mac with «Dante Firmware Update Manager» installed. Check [www.dbaudio.com](http://www.dbaudio.com) for the latest version.
- d&b Firmware file. Check [www.dbaudio.com](http://www.dbaudio.com) for the latest version.

### Update procedure

#### Preconditions

- Ensure all Dante devices to be updated are connected to the Dante network via their **Primary** ethernet ports only (**ETH 1**).
- The computer must be connected to the Dante network via one network interface only. Unplug any other network connections and disable Wi-Fi.

#### Physical setup - Star topology

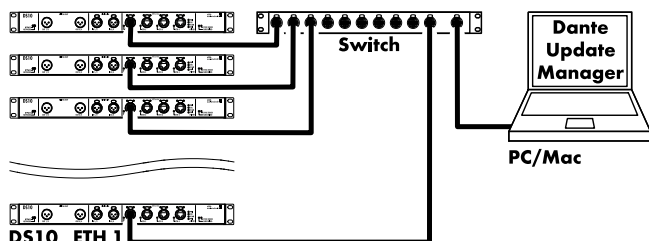

Physical setup for a maximum of ten (10) devices

### Procedure

1. Start «Dante Firmware Update Manager».
2. Select the corresponding network interface to which the Dante devices are connected.
3. Click «Next».
4. Select «Update Dante Firmware».
5. Click «Browse» and select the corresponding Firmware update files.

**Note:** Ensure that the «Override Device Matching» checkbox is unchecked.

6. Click «Next».
  - ⇒ The «Firmware Update Manager» will now look for Dante devices for which the selected Firmware file is applicable.
7. Select the devices that need to be updated.

**Note:** Do not select more than ten (10) devices at a time.

8. Click «Start».
  - ⇒ The update process will start and may take several minutes.

The status of each device's process is shown in the «Status» column.

When all devices have been updated a pop up message will appear, indicating that the process is finished.

9. Reboot all devices to apply the new firmware.