D

Z5600.002/Z5600.003
Manual 1.4 en



d&b audiotechnik

Notes on document version
All previous versions of this document are hereby no longer valid.

Version 1.4:
Auxiliary mains output connector socket type corrected.

Refer to:
⇒ Chapter 3.3.2 “AUXILIARY MAINS OUTPUTS” on page 12.

General information

Z5600.002/Z5600.003 Manual

Version: 1.4 en, 10/2025, D2760.EN .01

Copyright © 2025 by d&b audiotechnik GmbH & Co. KG; all rights reserved.

Keep this document with the product or in a safe place so that it is available for future reference.

We recommend you to regularly check the d&b website for the latest version of this document.

When reselling this product, hand over this document to the new owner.

If you supply d&b products, please draw the attention of your customers to this document. Enclose the relevant documents with the systems. If you require additional documents for this purpose, you can order them from d&b.

d&b audiotechnik GmbH & Co. KG
Eugen-Adolff-Str. 134, D-71522 Backnang, Germany
T +49-7191-9669-0, F +49-7191-95 00 00

Explanation of graphical symbols



The lightning symbol within a triangle is intended to alert the user to the presence of uninsulated "dangerous voltages" within the unit's chassis that may be of sufficient magnitude to constitute a risk of electric shock to humans.



The exclamation point within a triangle is intended to alert the user to the presence of important operating and service instructions in the literature accompanying the product.




Before using this product, carefully read the applicable items of the following safety instructions.


1. Keep these instructions for future reference.
2. Read these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. **WARNING!**
   To reduce the risk of fire or electric shock:
   - Do not expose the rack assembly to rain or moisture.
   - Keep water or other liquids away.
   - Do not place liquid filled containers, for example beverages, on top of the rack assembly.
   - Do not operate the rack assembly while it is wet or standing in liquid.
6. Do not use the rack assembly if its mains power cord is damaged or frayed.
   Protect the power cord from being walked upon or pinched, particularly at the plugs and the point where it exits from the rack assembly.
7. Use the mains plug of the rack assembly as the disconnecting device and keep it readily accessible.
8. Lay all cables connected to the rack assembly carefully so that they cannot be crushed by vehicles or other equipment and that no one can either step on them or trip over them.
9. Unplug the rack assembly during lightning storms or when unused for long periods of time.

Contents

1 D40/D25 Touring rack assembly 10 RU - CEE 5
1.1 Intended use 5
1.2 Z5600.002 Scope of supply 6
1.3 Z5600.003 Scope of supply 7
1.4 Dimensions and weight 8
2 Handling, cooling and placement 9
2.1 Handling 9
2.2 Cooling and placement 9
3 Z5610.000 Mains power distributor and LS Panel - CEE 10
3.1 Intended use 10
3.2 Rear panel 10
3.2.1 MAINS SUPPLY 10
3.2.2 MAINS LINK - 32 A CEE (20 $A_{max.}$) 11
3.2.3 AMP 1 / AMP 2 / AMP 3 MAINS SUPPLY 11
3.2.4 AMP 1 / AMP 2 / AMP 3 4 CH OUTPUTS 11
3.3 Front panel 12
3.3.1 MAINS 12
3.3.2 AUXILIARY MAINS OUTPUTS 12
3.3.3 AMPLIFIER MAINS OUTPUTS 12
3.3.4 4 CH OUTPUTS - NL8 13
3.3.5 12 CH OUTPUT 13
4 Z5604 I/O Panel 14
4.1 Intended use 14
4.2 Overview 14
4.2.1 INPUT 14
4.2.2 INPUT LINK 14
4.2.3 Remote network option 14
5 DN1 Ethernet switch 15
5.1 Overview 15
5.2 Front panel 15
5.2.1 ETH 9 - ETH 11 15
5.2.2 Operating mode selection 15
5.2.3 LED indicators 16
6 Rack wiring diagrams 17

1 D40/D25 Touring rack assembly 10 RU - CEE

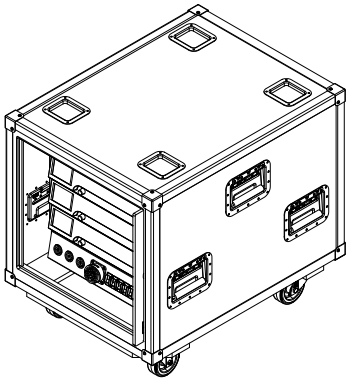

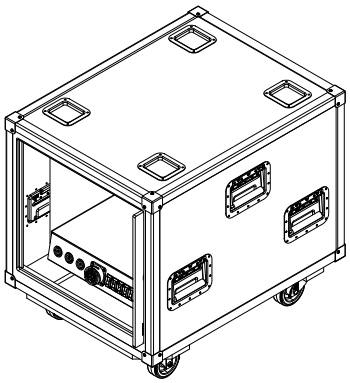

1.1 Intended use

Z5600.002 D40 Touring rack
The Z5600.002 D40 Touring rack assembly CEE is designed as a closed system rack providing mains power distribution and connector interfaces for 3 x D40 amplifiers each. For this purpose, the touring racks are equipped with a mains power distribution device (Z5605.000), which also serves as a loudspeaker connector panel.

In addition, the Z4001 DN1 Ethernet network switch provides an AVB-enabled 11-port switch (3 x etherCON® / 8 x RJ45).

Also incorporated is an I/O panel (Z5604), which serves as a connector interface for both analog and digital audio signals.


Optionally, the Z5607 DN1 upgrade kit is available to provide a second DN1 for redundant possible applications.


Z5600.003D25 /D40 Preassembled touring rack
The Z5600.003 D25 /D40 Preassembled touring rack CEE is designed as a closed system rack providing mains power distribution and connector interfaces for 3 x D40/D25 amplifiers each. The touring rack is supplied without amplifiers and can then be individually equipped with D25 /D40 amplifiers by the customer. For this purpose, the touring rack is equipped with a mains power distribution device (Z5605.000), which also serves as a loudspeaker connector panel.

In addition, the Z4001 DN1 Ethernet network switch provides an AVB-enabled 11-port switch (3 x etherCON / 8 x RJ45).

Also incorporated is an I/O panel (Z5604), which serves as a connector interface for both analog and digital audio signals.

Optionally, the Z5607 DN1 upgrade kit is available to provide a second DN1 for redundant possible applications.

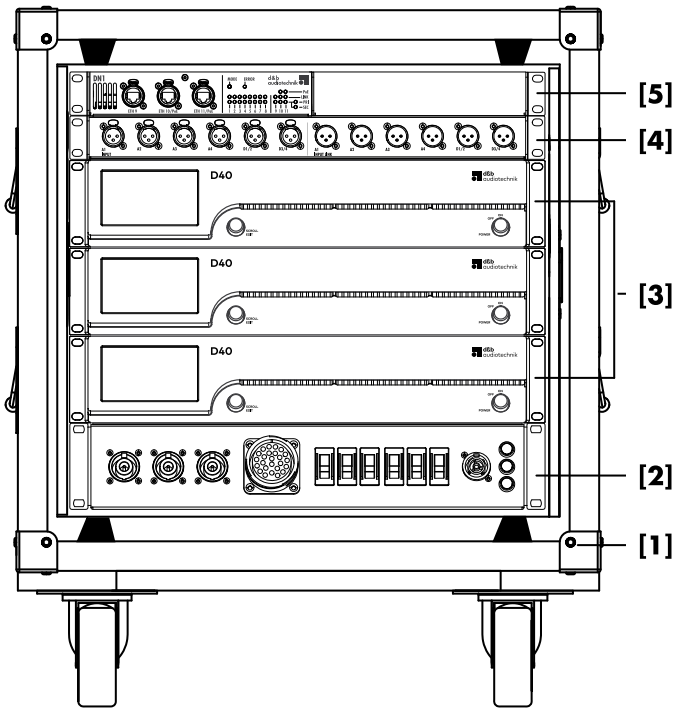

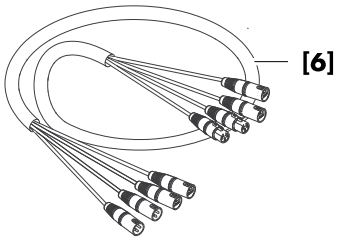


1.2 Z5600.002 Scope of supply

Before starting up, please verify the shipment for completeness and proper condition of the items.

If there is any sign of obvious damage, do not operate the rack assembly and contact your local dealer from whom you received it.

Note: Depending on the ordered rack assembly variant, the rack assembly comprises the following components:

Pos.	Qty.	d&b Code	Description
[1]	1	Z5600.002	Touring rack assembly 10 RU (CEE) - with shock mounted 19" frame
Including:			
[2]	1	Z5605.000	Mains power distribution and LS Connector panel (CEE)
[3]	3	Z2850	D40 Amplifier
[4]	1	Z5604.000	I/O Panel
[5]	1	Z4001	DN1 Network switch
[6]	1	Z5333.001	Rack link network
		D2760.EN .01	Z5600.002 Manual
Optional:			
	1	Z5607	DN1 upgrade kit 10RU

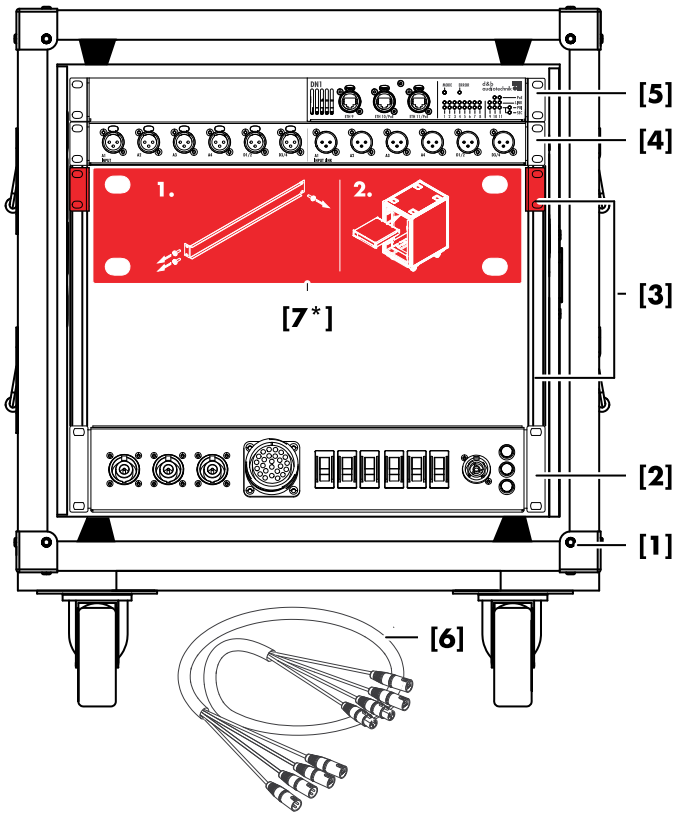

[*7]: Remove the transport protection before mounting the amplifiers.

1.3 Z5600.003 Scope of supply

The D40/D25 Touring rack assembly is available as a preassembled rack without amplifiers.

Before starting up, please verify the shipment for completeness and proper condition of the items.


If there is any sign of obvious damage, do not operate the rack assembly and contact your local dealer from whom you received it.

When mounting the amplifiers yourself, observe the following recommendations:

CAUTION!
Risk of electric hazard and/or fire!

The Z5600.003 Preassembled touring rack assembly is designed and dimensioned for the safe operation of **three** d&b D40/D25 amplifiers and therefore **only d&b D40/D25 amplifiers** must be mounted into the rack.

Pos.	Qty.	d&b Code	Description
[1]	1	Z5600.003	Preassembled touring rack assembly 10 RU (CEE) - with shock mounted 19" frame.
Including:			
[2]	1	Z5610.000	Mains power distribution and LS Connector panel (CEE).
[3]	3	Rack space for three d&b D40/D25 amplifiers. **Note:** For the internal rack wiring, all necessary cables are enclosed with the shipment. For wiring details, please refer to ⇒ Chapter 6 “Rack wiring diagrams” on page 17.	
[4]	1	Z5604.000	I/O Panel.
[5]	2	Z4001	DN1 Network switch.
[6]	1	Z5333.001	Rack link network.
		D2760.EN .01	Z5600.003 Manual.
Optional:			
	1	Z5607	DN1 upgrade kit 10RU

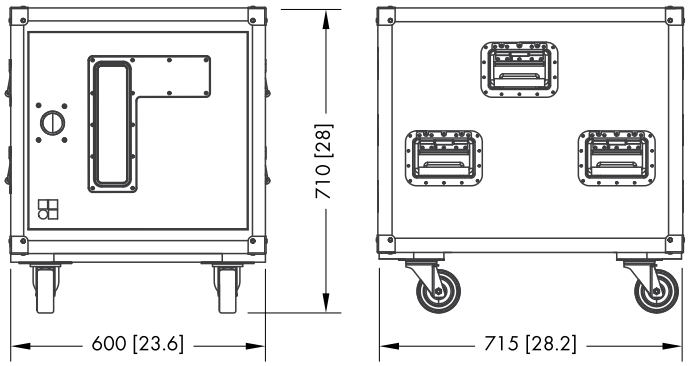


1.4 Dimensions and weight

Height x width x depth ..... 710 x 600 x 715 mm

..... 28 x 23.6 x 28.2"

Total weight (1x DN1 included) ..... 110 kg / 242 lb

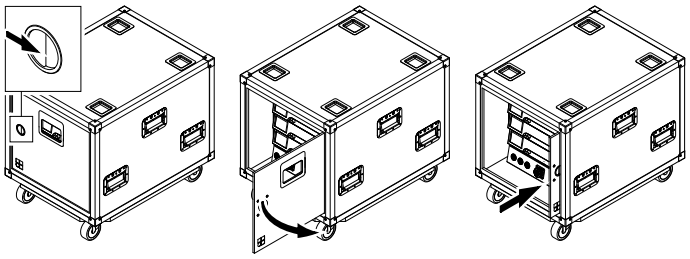


2.1 Handling

The touring rack is equipped with two sliding doors allowing quick and easy access to the front and rear panels of the devices.

1. Unlock the door lock mechanism.
2. Open the door.
3. Push the door into its park position.


2.2 Cooling and placement

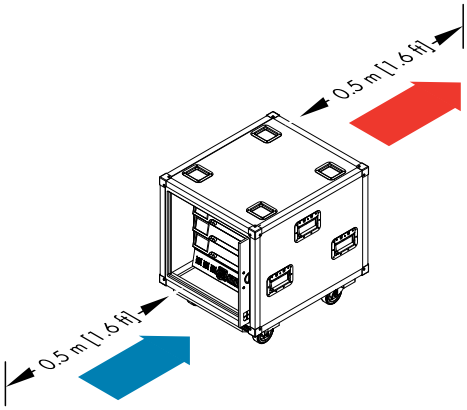

NOTICE!
Risk of malfunction due to overheating!

Make sure both the front and rear doors are opened and pushed into their park positions to provide sufficient cooling.

When using touring rack assemblies such as the d&b D40/D25 Touring rack assembly or any other touring rack containing D40/D25 amplifiers, make sure to provide sufficient space of 0.5 m (1.6 ft) at the front and rear of the touring rack to ensure adequate cooling airflow.

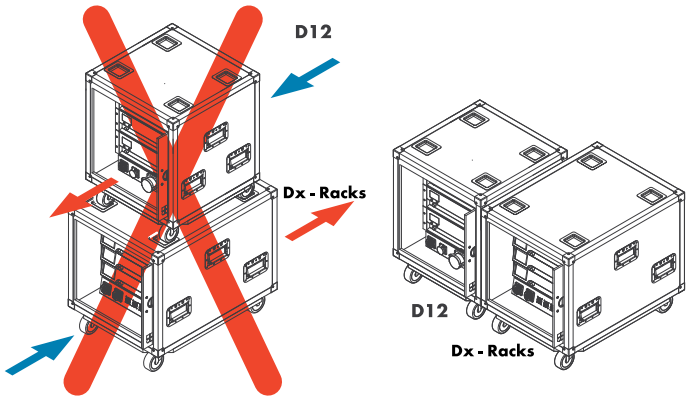


CAUTION!
Risk of personal injury and/or damage to material due to possible tipping over!

To avoid possible tipping over, do not move stacked touring racks.


D40/D25 Touring rack assemblies as well as D80/D90/D20 Touring racks can be stacked or positioned side by side.

When combining D40/D25 Touring rack assemblies with Z3010 D12 Touring rack assemblies or any other rack assemblies that produce an opposing airflow, observe the following restrictions:

- Do **not stack** D12 Touring racks or any other rack assemblies with opposing airflow on top of the D40/D25 Touring Rack.

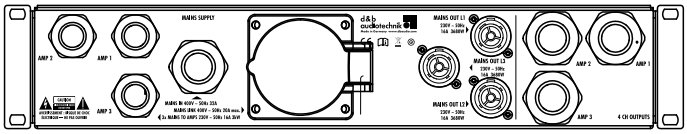

Z5610.000 Rear panel

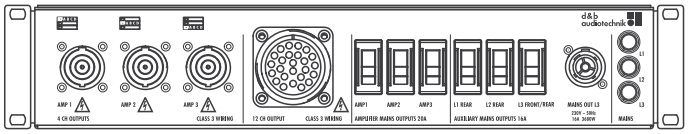

Z5610.000 Front panel

3.1 Intended use


The Z5610.000 Mains power distributor is designed and dimensioned to provide and distribute the mains power supply necessary for **three** D40 amplifiers. It also serves as a loudspeaker connection panel for different connection options.


It is a 2 RU, protective class 1 unit with IP class 20 (NOT rain-, drip-, or splash-proof!).

The Z5610.000 Mains power distributor must not be used for any other purpose or outside the system rack.

3.2 Rear panel

3.2.1 MAINS SUPPLY

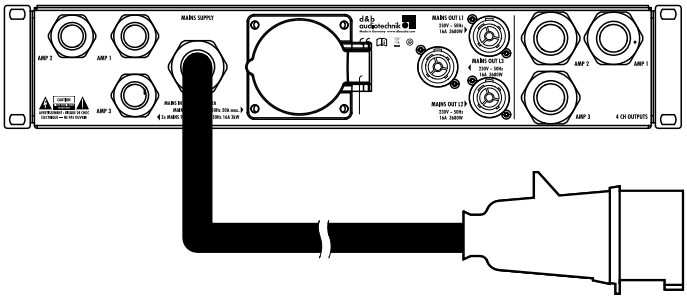

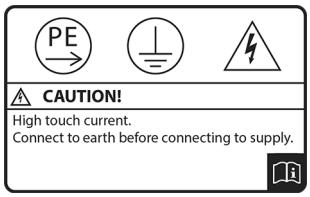

WARNING!
Potential risk of electric shock.


The Mains power distributor is a protective class 1 unit. A missing earth (ground) contact may cause dangerous voltages in the housing and controls and may lead to electric shock.

- Connect the unit to mains power supplies with protective earth only.
- If there is any sign of obvious damage to the power cord and/or mains connector, do not use the unit and replace it before further use.
- Do not connect or disconnect the mains connector under load or live.
- Please ensure the mains connector is accessible at any time to disconnect the rack assembly in case of malfunction or danger.
- The whole rack assembly generates a leakage current of approx. 8 mA. It is strongly recommended that the appliance is only operated on sockets with suitable earthing protection and a Residual Current protective Devices (RCD).

The Z5610.000 Mains power distributor is supplied with a fixed 3-phase power cord equipped with a 32 A CEE (Cekon) mains connector.

Required mains supply network configuration
3-phase 230/400 VAC - 50/60 Hz - 32 $A_{max.}$ B or C Frame (3PNPE).

Connect only **one** rack assembly to the mains power outlet of the onsite sub-distribution.

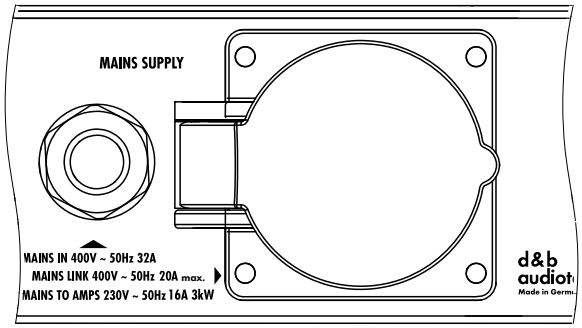


3.2.2 MAINS LINK - 32 A CEE (20 $A_{max.}$)

The MAINS LINK socket allows further system racks to be linked to the mains power supply.


NOTICE!

To avoid any overload of the onsite mains power supply, we recommend you to link no more than **one** further system rack to the respective mains power supply line.

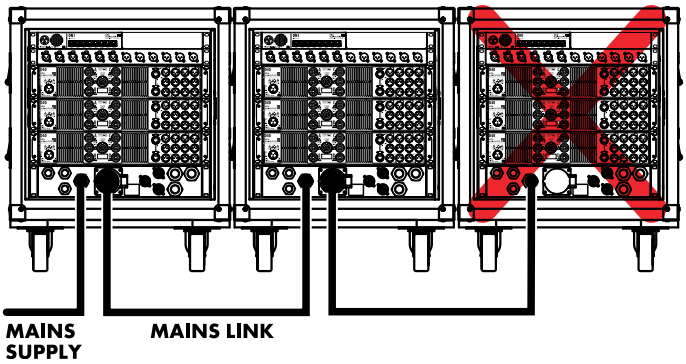


3.2.3 AMP 1 / AMP 2 / AMP 3 MAINS SUPPLY

Three fixed single-phase mains power lines (L1-L2-L3) with dedicated lengths, each fitted with a powerCON® HC mains connector, are provided for the internal mains power supply of the amplifiers.

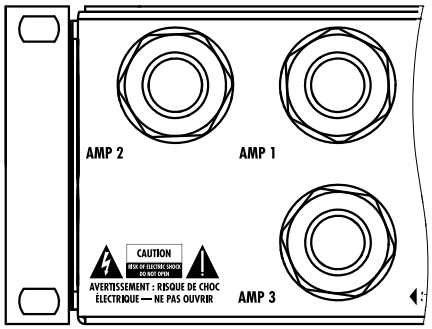

3.2.4 AMP 1 / AMP 2 / AMP 3 4 CH OUTPUTS


Three fixed multicore cables with dedicated lengths, each fitted with an NL8 connector, are provided for the internal 4 CH OUTPUTS wiring of the amplifiers.

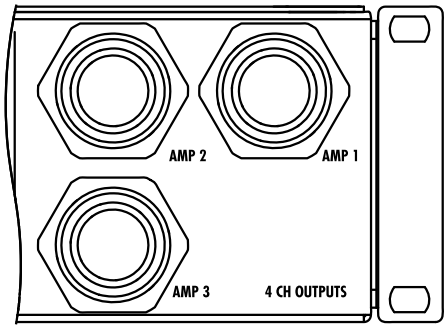

3.3 Front panel

3.3.1 MAINS

When the rack is connected to the onsite mains power supply, the three mains indicators display the presence of the onsite mains supply lines (phase conductor L1-L2-L3).

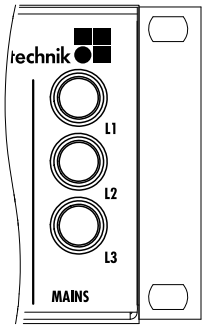


3.3.2 AUXILIARY MAINS OUTPUTS

Four auxiliary mains outputs (powerCON® TRUE1 TOP sockets) are provided. Mainly intended to apply mains supply for the DN1 devices.

The remaining sockets are intended for the connection of low current devices such as notebooks or additional Ethernet switches.


The sockets are equipped with dedicated circuit breakers (16 A / C Frame type).

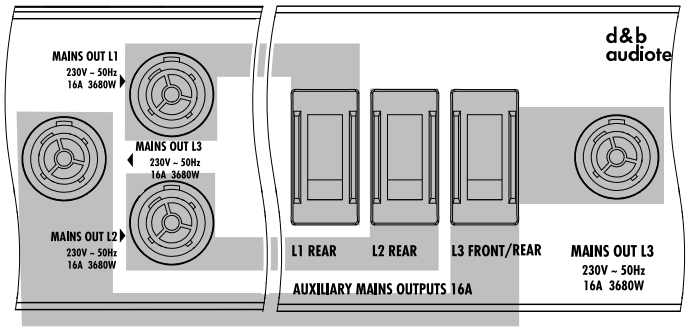


3.3.3 AMPLIFIER MAINS OUTPUTS

Each single-phase mains power line is equipped with a dedicated circuit breaker (16 A / B Frame type).

The respective circuit breakers of the onsite mains distribution are still necessary for this purpose.

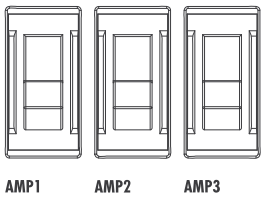

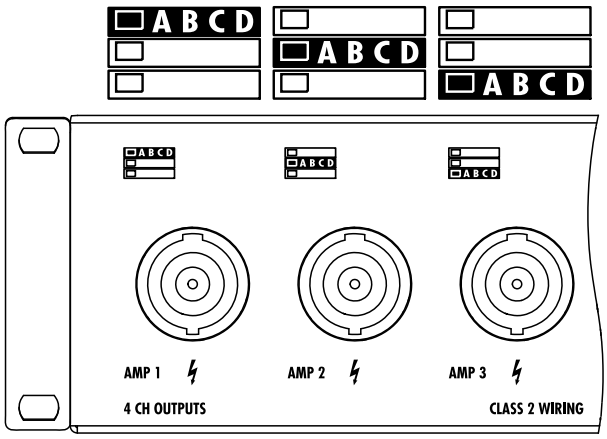

3.3.4 4 CH OUTPUTS - NL8


NOTICE!

The 4 CHANNEL OUTPUT connectors are only intended as an interface to a rack panel or to loudspeaker multicores and breakout adapters. Do not connect any loudspeaker cabinets, neither passive nor active systems, to these connectors, otherwise there is a risk of damaging the loudspeaker components or the amplifier.

Each of the 4 CH OUTPUTS connectors represents the 4 CHANNEL OUTPUT of the respective D40 amplifier. Each connector carries the output signals of all four channels of the amplifier with the following pin assignment:

1+/– = Channel A pos. / neg.	2+/– = Channel B pos. / neg.
3+/– = Channel C pos. / neg.	4+/– = Channel D pos. / neg.

Please refer to the corresponding channel assignment label above each connector as shown in the graphic opposite.

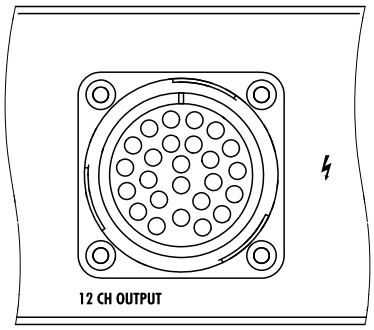

3.3.5 12 CH OUTPUT

One 12 CH OUTPUT multipin connector (LKA25) is provided to allow efficient system wiring using the d&b MC24 multicore system (Z5328.xxx MC24 LKA25 F/M Multicore, Z5325.000 Break-out adapterLKA25M to 6 x NLT4M, Z5327.000 Break-out adapter LKA25M to 12 x NLT4M and Z5326.000 Break-in adapter 3 x NLT8F to LKA25F).

The d&b MC24 Multicore System combines a 12-amplification-channels cable (24 lines 4 mm^2) with an LKA25 F/M connector.

For this reason, the connector carries the output signal of twelve (12) amplifier channels.

Pin equivalents of the LKA25 connectors and the corresponding 4 CHANNEL OUTPUT (NL8) connectors of the respective amplifier are listed in the following table:


12 CH OUTPUT AMP 1/2/3								
LKA25	**NL8**	**Amplifier**	**LKA25**	**NL8**	**Amplifier**	**LKA25**	**NL8**	**Amplifier**
A	1+	**AMP 1**	I	1+	**AMP 2**	Q	1+	**AMP 3**
B	1–	1	J	1–	2	R	1–	3
C	2+		K	2+		T	2+	
D	2–		L	2–		U	2–	
E	3+		M	3+		V	3+	
F	3–		N	3–		W	3–	
G	4+		O	4+		X	4+	
H	4–		P	4–		Y	4–	

4.1 Intended use


The D40 I/O Panel is intended for rack mounting only and must not be used stand-alone outside of a rack.

Within an amplifier system rack, it acts as connecting interface for both analog and digital audio INPUT and INPUT LINK connectors.


4.2 Overview

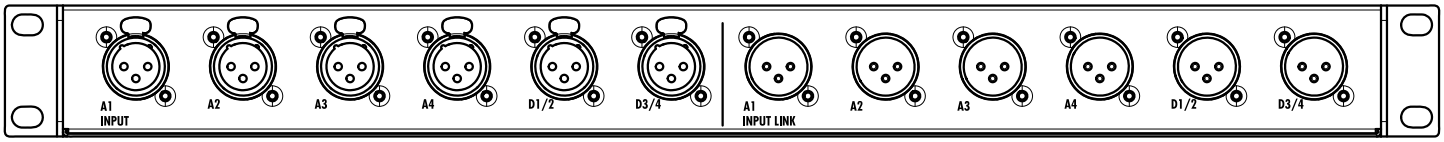


Z5604 Front view

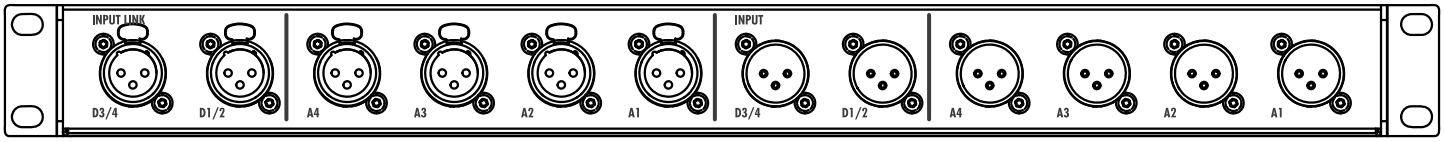

Z5604 Rear view

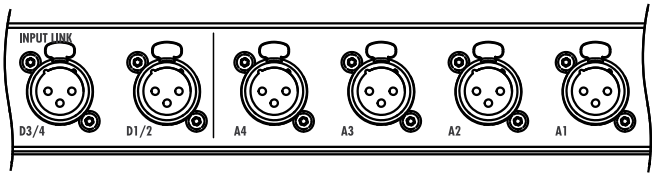

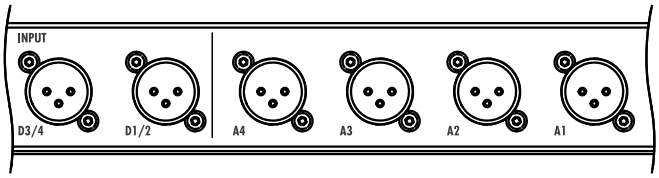

4.2.1 INPUT

The INPUT section represents the input connectors of the first amplifier while the remaining amplifiers are linked within the rack. The INPUT section allows both analog and digital (AES3) audio signals to be fed to the amplifier.

4.2.2 INPUT LINK


The INPUT LINK section represents the link output connectors of the last amplifier and allows the linking of further system racks.

4.2.3 Remote network option

You can daisy chain the rack assemblies within a remote network using the enclosed rack link cable (Z5333.001).


For remote purposes via Ethernet/OCA, it is strongly recommended to use the prewired configuration in combination with the DN1 when linking entire rack assemblies, as shown in the graphic opposite.

It is recommended to link a maximum of up to 6 rack assemblies in this way.

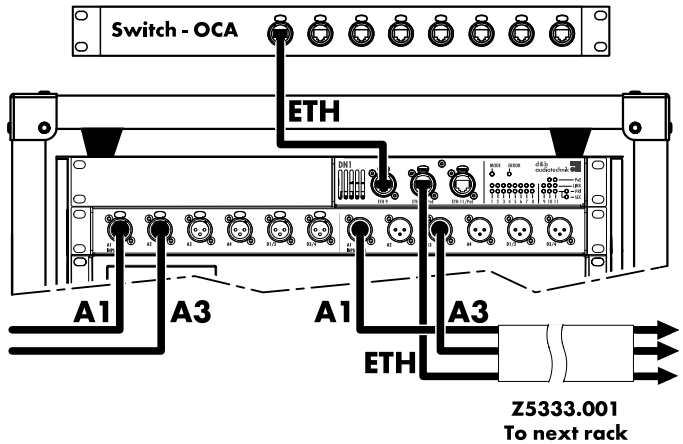

I/O panel, rack link:
2ch Analog audio and Ethernet/OCA


Rear panel connectors

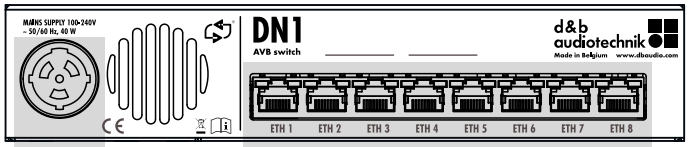

Internally wired:

[1] powerCON TRUE1 TOP® mains connector socket.


[2] 8 x RJ 45 ports (ETH 1 - ETH 8).

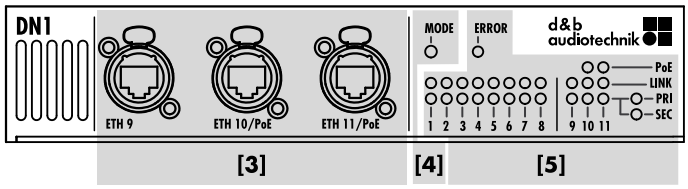

Note: Either of the «ETH 10/PoE» or «ETH 11/PoE» connector is also intended to feed an inclinometer such as the d&b ArraySight sender unit, which is integrated in the flying frame for vertical aiming of the entire array.

5.1 Overview

Front panel connectors, controls and indicators

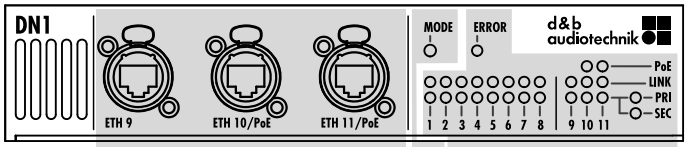

[3] etherCON® switch ports ETH 9 - ETH 11.
Refer to ⇒ Chapter 5.2.1 “ETH 9 - ETH 11” on page 15.

[4] Mode button.
Refer to ⇒ Chapter 5.2.2 “Operating mode selection” on page 15.

[5] Multi-colored LED indicators.
Refer to ⇒ Chapter 5.2.3 “LED indicators” on page 16.

5.2 Front panel

5.2.1 ETH 9 - ETH 11

The device provides an 11-port Ethernet switch for different network topologies, redundancy (two devices) and advanced functionality with AVB. For this purpose, three connectors are provided on the front panel.

Power over Ethernet (PoE)

The « ETH 10/PoE» and «ETH 11/PoE» Ethernet connectors also provide Power over Ethernet based on IEEE standard 802.3af. Each port delivers a maximum of 15.4 W, both ports deliver a maximum total of 25 W. If the maximum power is exceeded, PoE supply will be shut off.

5.2.2 Operating mode selection

On the front panel, the device features a «MODE» button which is used for the following purposes:

- **Factory reset**
  Reset the device to factory defaults maintaining remote settings.
- **Configuration mode**
  Toggle between primary and secondary configurations.
- **Remote reset**
  Reset all remote settings to factory defaults.
- **Wink mode** (device identification)
  Visual identification of the device.

Factory reset

The factory reset function resets all device settings to factory defaults except for those affecting remote communication (dbRemoteID and IP configuration: Address, Gateway, Netmask and Mode).

To reset the device to factory defaults, proceed as follows:

1. Disconnect the device from the mains power supply.
2. Press and hold the «MODE» button, then reconnect the device to mains again.
   ↳ All AVB port status LEDs turn red for a short period. It takes up to 20 seconds until this pattern is shown. All other LEDs are off.

3. Release the «MODE» button.
4. Within two seconds, press the «MODE» button again.
   ↳ All AVB port status LEDs turn red for two seconds. The other LEDs are off and all settings are set to default values.

   If you do not press the «MODE» button again at this point, the reset will not be performed and the LEDs will return to their normal operating behavior.

5.2.3 LED indicators


All device states and operating modes are indicated by dedicated multi-color LEDs.

Note: In case of a device error, connect the device to R1 via OCA to obtain further information.


The LED color codes and the related device states and operating modes are detailed in the table below.

LED color	[1] Error	[2] LINK	[3] AVB	[4] PoE	[5] PRI/SEC
	Device error detected.	-	Detected AVB network does not match the device settings.	-	-
	-	Network activity, max. 1 Gbit.	-	-	-
	-	Network activity, max. 100 Mbit.	-	-	-
	-	-	Primary AVB network detected.	-	Device in PRI network mode.
	-	-	Secondary AVB network detected.	-	Device in SEC network mode.
	-	-	-	Active PoE supply.	-
LED off	Normal operation.	No active connection.	No AVB network information.	No PoE enabled device connected.	-
LED flashing	-	Data traffic.	-	PoE Error.	-


Mains power connection and internal mains supply distribution with 1 x DN1

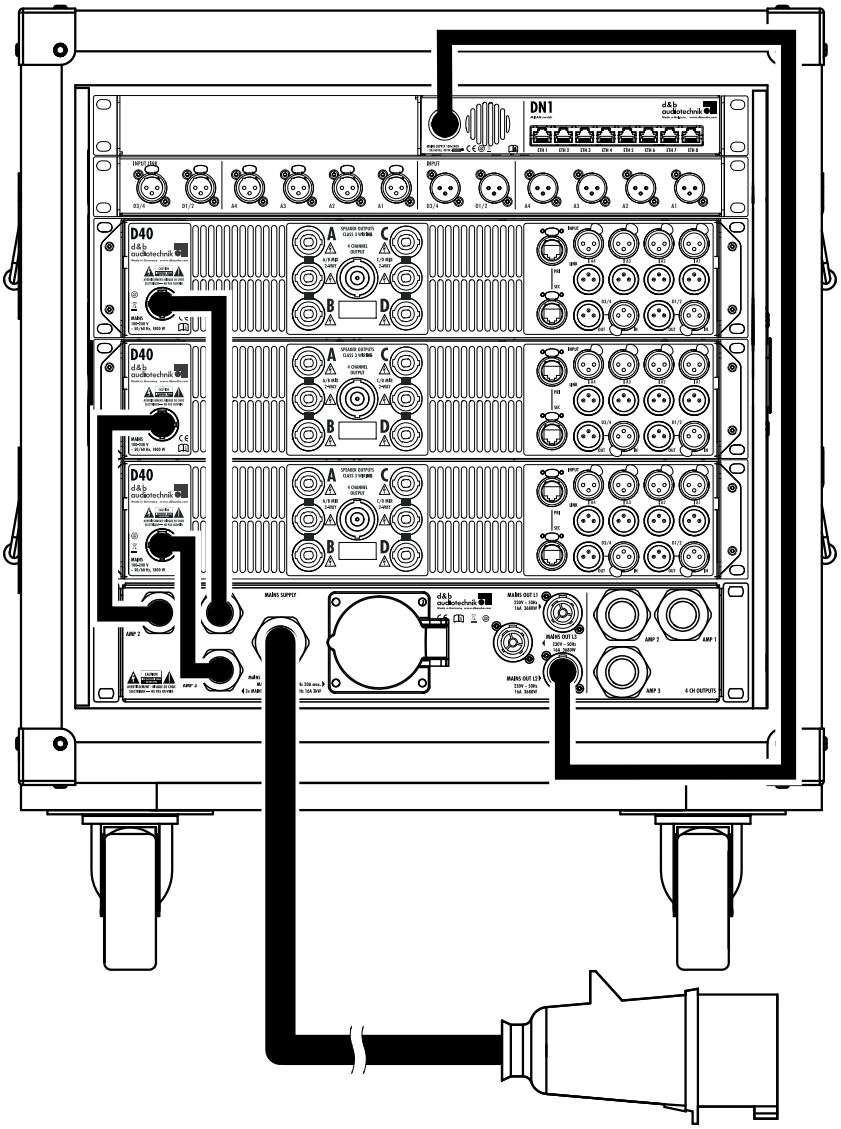


(Optional) Mains power connection and internal mains supply distribution with 2 x DN1

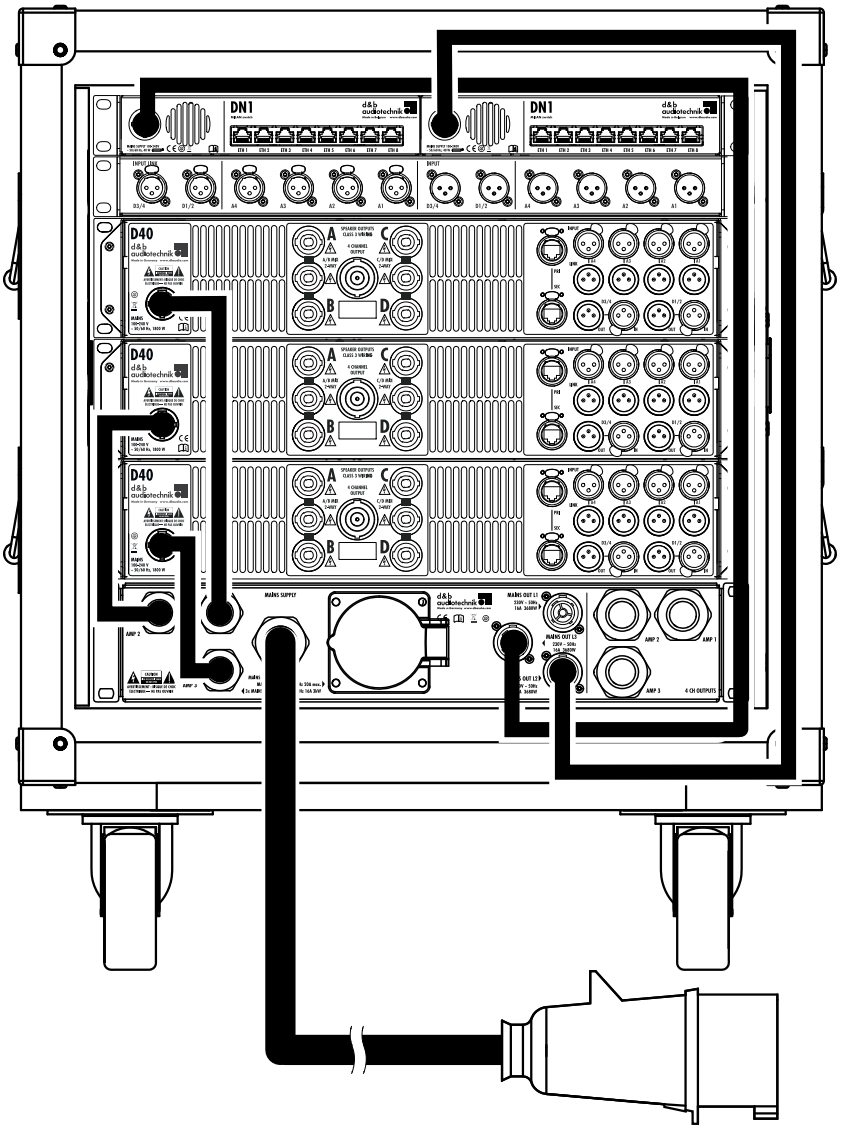


Internal 4 CHANNEL OUTPUT wiring

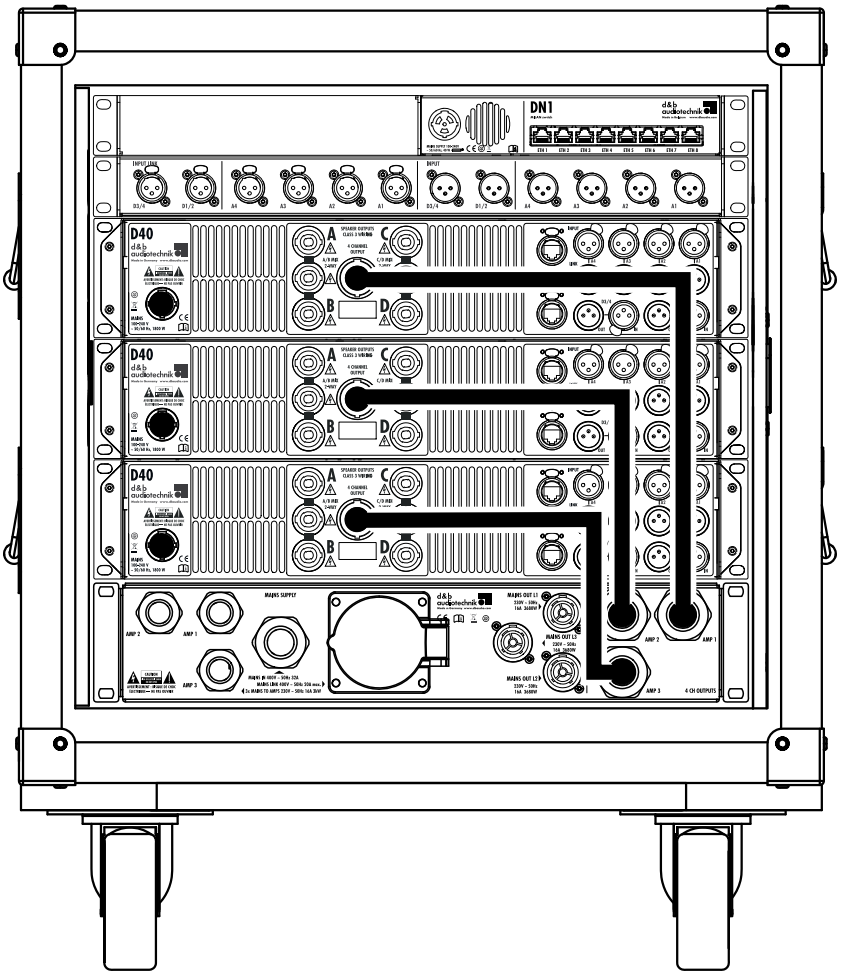


Internal digital audio INPUT and LINK wiring

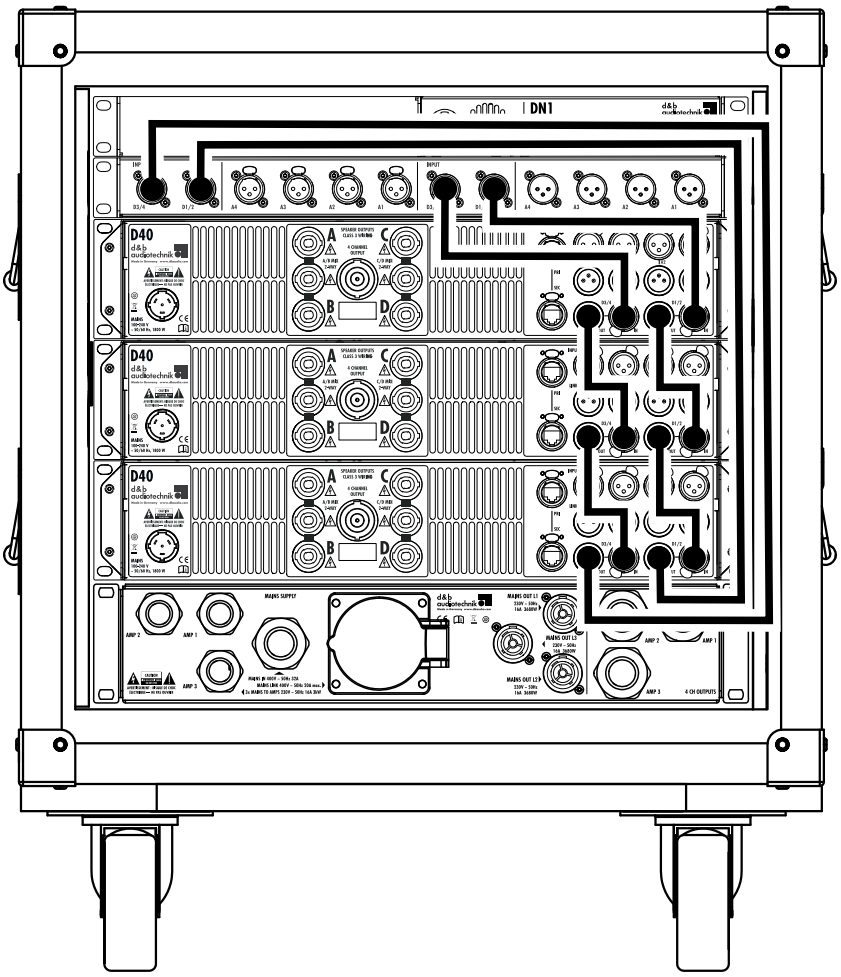


Internal analog audio INPUT and LINK wiring

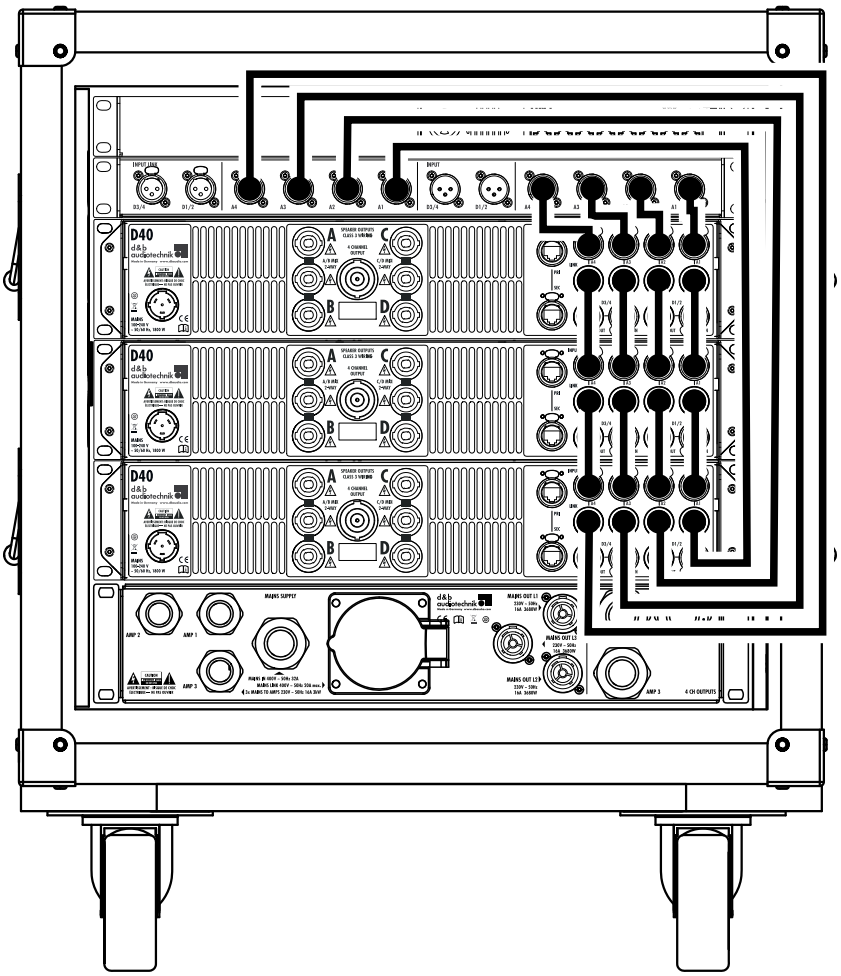

Internal Ethernet network wiring with 1 x DN1

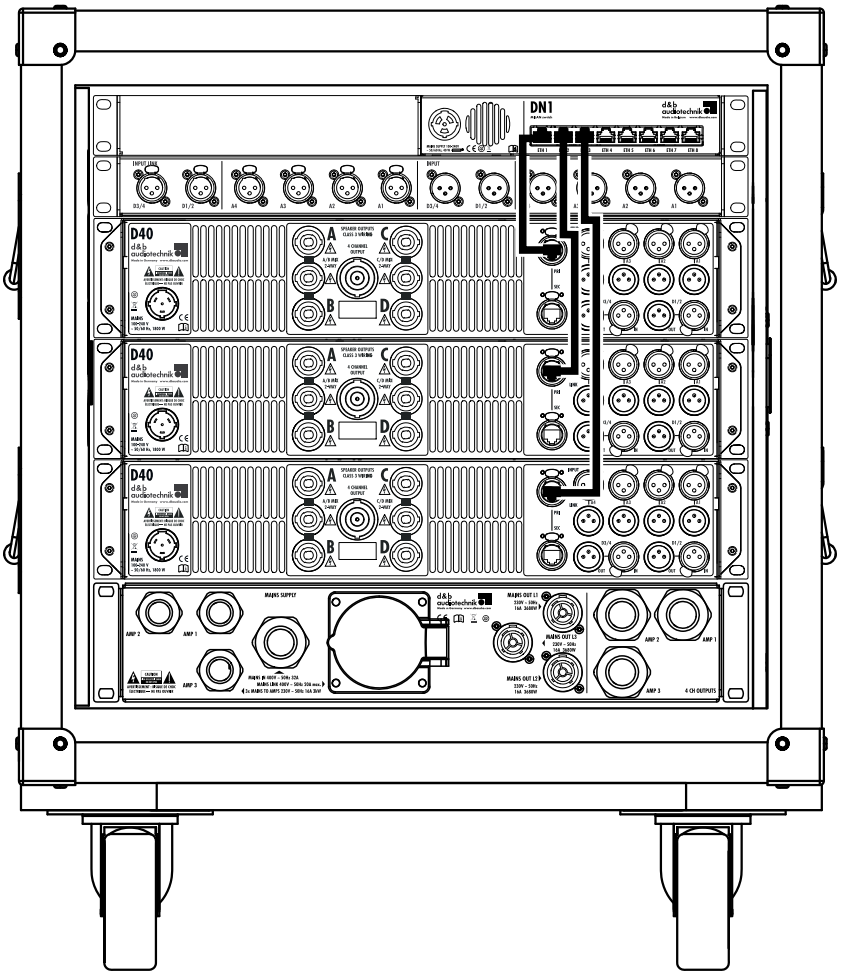

(Optional) Internal Ethernet network wiring with 2 x DN1 (Milan™)

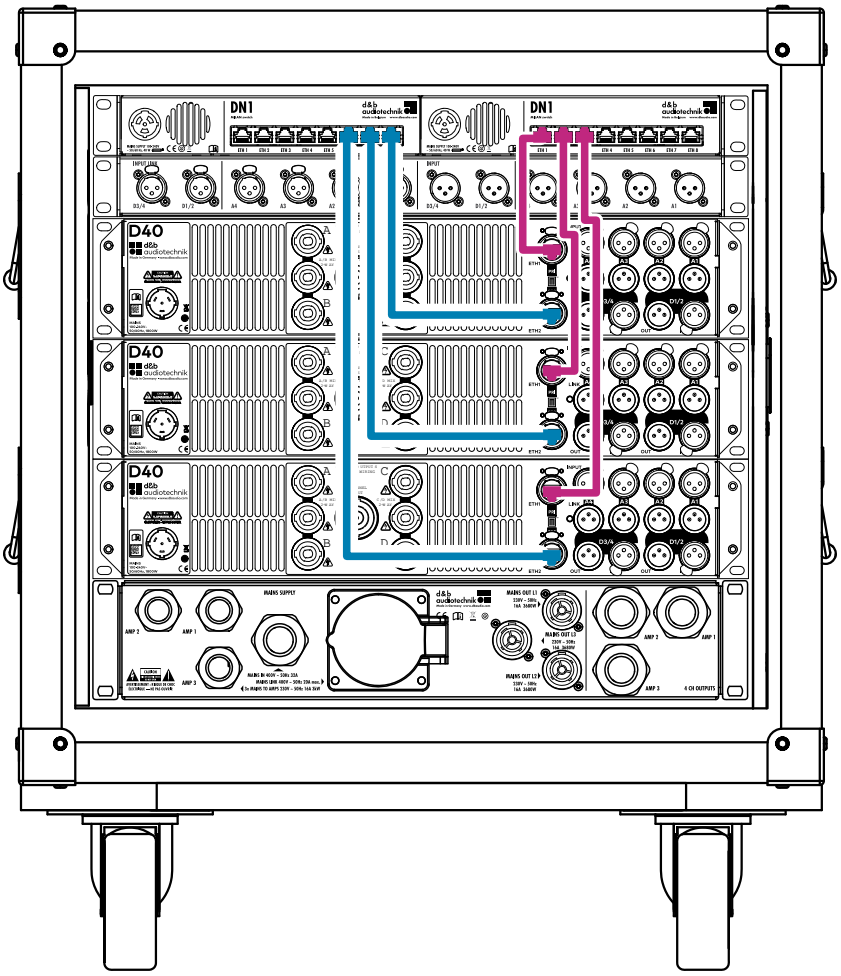

D2760.EN.01, 10/2025 © d&b audiotechnik GmbH & Co. KG

d&b audiotechnik